



# Samsung WB150F Memory Card Replacement

This guide will explain which memory cards are compatible with your Samsung WB150F as well as explain how to properly install or replace the memory card.

Written By: Keith Albergaria



## Step 1 — Memory Card



- The Samsung WB150F is compatible with any SDHC memory cards.
- If you already have a memory card and the size is not compatible with this camera, adapters can be purchased like the one shown here.
- Follow this link if you would like to purchase a suitable memory card for your Samsung WB150F.

<http://www.amazon.com/Samsung-WB150F-Dig...>

## Step 2



- Flip the camera upside-down so that the compartment with the battery and memory card is facing you.




## Step 3




- Using your finger, slide the plastic lock-tab to the left.
- The compartment should then swing open.

## Step 4

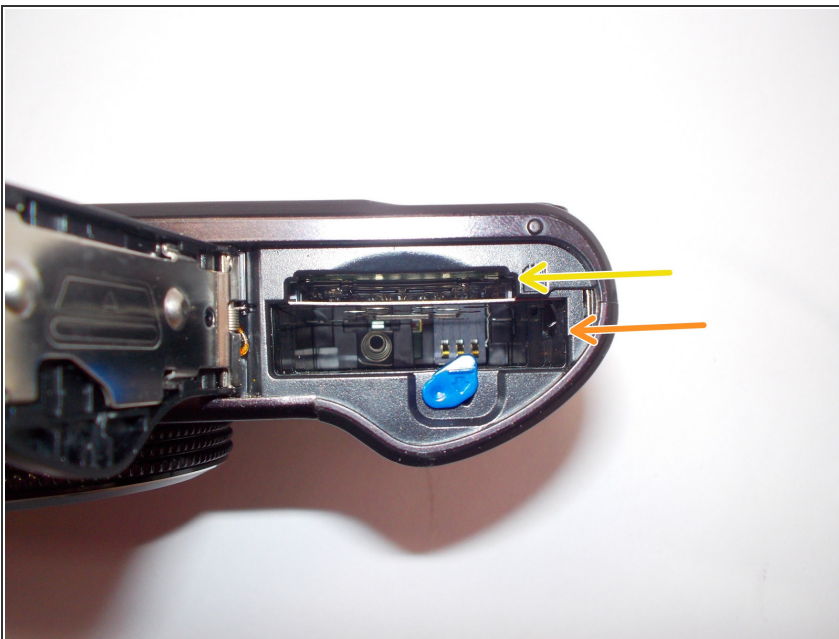


- The larger cavity is for the battery.
- The small thin cavity is where you will be placing the memory card.

## Step 5

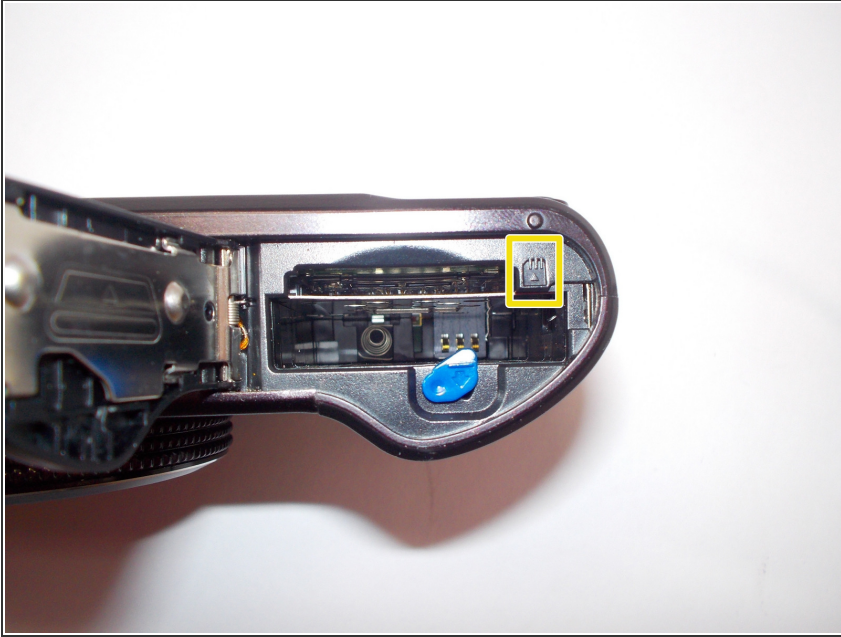

- If you look closely, to the right of the memory card cavity there is a small engraved image.
- This engraving shows you how to orient the memory card before inserting it.
- Now before inserting your memory card, let's reference the engraving to ensure that your memory card will be properly oriented.

## Step 6

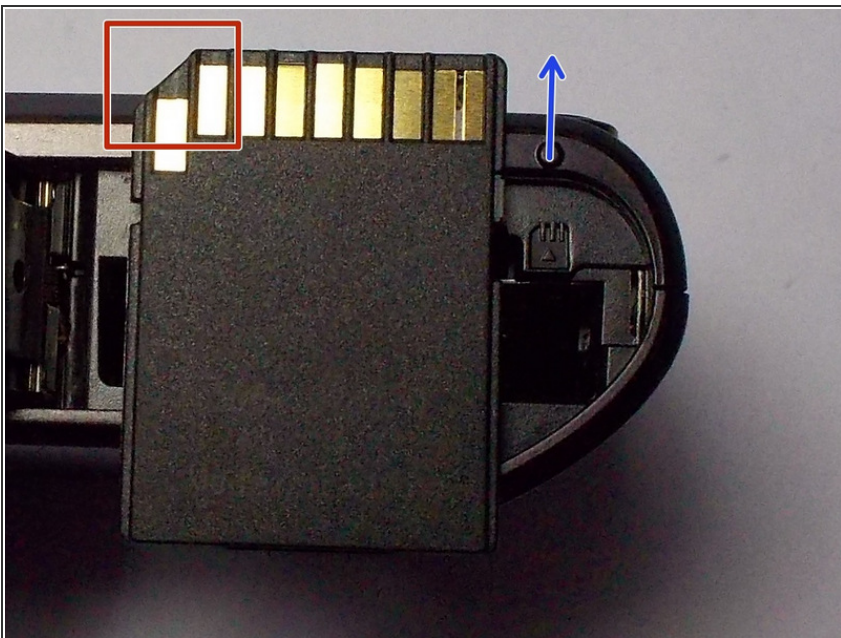

- The slanted corner of the memory card should be facing to the left.
- The copper prongs from the memory card should be facing the backside of the camera with the screen.
- Now simply lift the memory card from the back to insert it in its proper space.



## Step 7



- Finally, slide the memory card into place.
- Press down until you hear a click or feel it shift into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 05:12:03 PM.